


Installation

12

CODING TRANSMITTER & RECEIVER

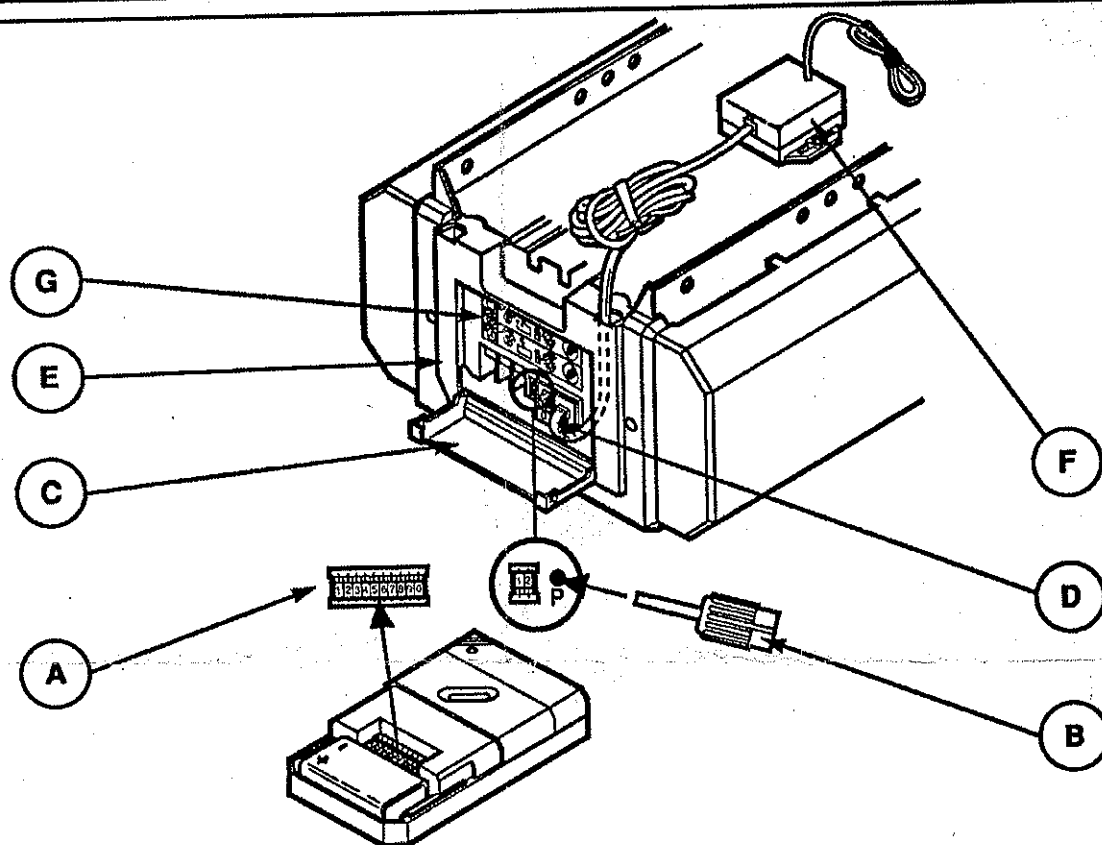

Connecting the TML Receiver and coding the hand transmitter:

- A) 10 digit code switches in the hand transmitter
- B) Adjusting pin for setting code switches and programming button (P)
- C) Control unit front cover
- D) Connecting plug to electronic aerial
- E) Drive unit front panel
- F) Electronic aerial
- G) Impulse indicator

Open the front cover (C). Feed the electronic aerial connecting cable with plug (D) through the drive unit front panel (E) and plug into the control unit.

There is an adjusting pin inside the front cover for setting the code switches. Set the positions of the 10 digit code switches (A) nos. 1-10 in the hand transmitter (personal code). There are 1024 possible codes.

Using the adjusting pin (B), activate the programming button P for approx. 2 seconds until the indicator (G) starts to flash.

Code the hand transmitter (in the case of the multi channel hand transmitter, operate the corresponding button) until indicator (G) starts to flash quickly. The coding is now stored even in the event of a power failure.

Operating the hand transmitter again allows the door to be opened or closed.

If after approx. 30 seconds no valid signal has been received from the hand transmitter, the coding procedure is automatically terminated. On completing the coding, close the front cover.