



This product should be used only in connection with garage door openers equipped with photo-eye safety sensors. If your garage door opener does not have photo-eye safety sensors, you should consider a replacement garage door opener. Please go to [www.liftmaster.com](http://www.liftmaster.com) to find a local LiftMaster dealer or call 1-800-528-9131.

## INSTALLATION

1. Disconnect power to the garage door opener.
2. OPEN RECEIVER: Insert a small screwdriver in slot on receiver front panel as shown. Twist up actuator cover (Figure 1).
3. CONNECT RECEIVER AND GARAGE DOOR OPENER: Remove 1/4" (6 mm) of insulation from each end of the 2-strand bell wire. Connect one end of the wire to the receiver screw terminals (polarity is not required). Route the wire along the channels and through the bottom (Figure 2).
4. Connect the other end of the bell wire to the two opener terminals labeled "2" (white) and "1" (red), "common" and "command" or the terminals used for the push button control.
5. Use insulated staples to secure bell wire between the receiver and the garage door opener. The length of bell wire depends on where the receiver will be installed. Replace actuator cover.
6. Choose a 120 Vac polarized outlet for the receiver which is OUT OF THE REACH OF CHILDREN. Plug receiver into selected outlet.
7. Reconnect power to the garage door opener.

## PROGRAMMING THE REMOTE CONTROL TO THE RECEIVER

With Security+®, the code between the remote control and the receiver changes with each use, accessing over 100 billion new codes.

You can activate your garage door opener with up to 8 Security+® remote controls and one Security+® Keyless Entry.

1. Pry open the front panel of receiver case with a screwdriver. Reconnect power to the garage door opener.
2. Press and release the "SMART" actuator on the receiver. The "SMART" indicator light will glow steadily for 30 seconds.
3. Within 30 seconds, press and hold the button on the hand-held remote control that you wish to operate your garage door.

The garage door opener will now operate when either the receiver actuator or the remote control push button is pressed.

Repeat steps 2 and 3 for each remote control that will be used to operate the garage door opener.

## TO ERASE ALL REMOTE CONTROL CODES

Press and hold the "SMART" actuator on the receiver panel until the indicator light turns off (about 6 seconds). All remote control codes are now erased. Then follow the steps above to reprogram each remote control.

## UNIVERSAL RECEIVER

MODEL 365LM (315 MHz) &  
635LM (390 MHz)

## ⚡ ⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH from electrocution:

- Be sure power is not connected BEFORE installing the receiver.

To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

Figure 1


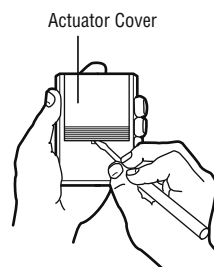 



Figure 2

 

Security+®  
Remote Control

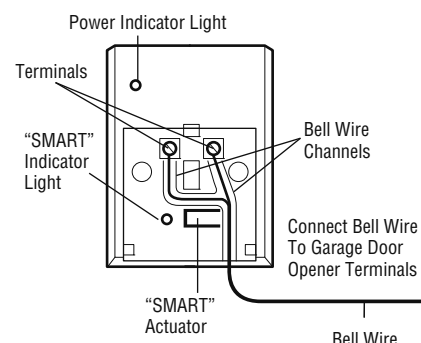

 Universal  
Receiver

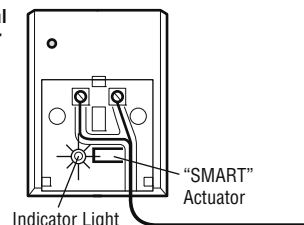

NOTICE: To comply with FCC and/or Industry Canada (IC) rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## REPLACEMENT PARTS

Visor clip ..... 29C137  
3V2032 Lithium battery ..... 10A20

## ACCESSORY REMOTE CONTROLS

Series 300. .... Model 365LM  
Series 900. .... Model 635LM

***HOW TO ORDER REPAIR PARTS***

**DEK CANADA INC**

1928 ST-REGIS BLVD.

DORVAL, QC

H9P 1H6

TEL: 514-685-5800

TOLL-FREE: 1-800-361-3198

FAX: 514-685-5804

**[www.dekcanada.com](http://www.dekcanada.com)**

**WHEN ORDERING REPAIR PARTS  
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

<b>PART NUMBER</b>	<b>DESCRIPTION</b>	<b>MODEL NUMBER</b>
--------------------	--------------------	---------------------