

Transmitter Coding Instructions

To order: 1 (800) 361-3198

DEK CANADA INC.

1928 boul. St-Regis
Dorval, Qc Canada H9P 1H6
Fax (514) 685-5804
www.dekcanada.com

WARNING: KEEP TRANSMITTERS OUT OF THE REACH OF CHILDREN AT ALL TIMES. THE DOOR MAY OPERATE DURING THE NEXT STEPS. KEEP DOOR PATHWAY CLEAR.

Before each hand held transmitter will operate, the power unit must "LEARN" the code each is sending. Simply follow the next steps to code each transmitter to operate your garage door opener power unit.

A. Press and release the LEARN button located on the rear of the power unit. The red LED indicator above the LEARN button and lights on the power unit will come on, indicating the power unit is now in the LEARN mode. See Figure 1.

B. Locate the transmitter, then while standing near the back of the power unit, press the button on the transmitter you wish to use to operate the garage door. The lights will blink two times then turn off. See Figure 2.

C. Press this SAME button on the transmitter again. This will activate the door opener.

D. The power unit must LEARN each transmitter separately. To code additional transmitters, simply repeat steps A through C for each transmitter.

E. If you get confused or out of sequence, just wait 30 seconds. The light will turn off ending the LEARN mode and allowing you to start over.

F. If you HOLD the LEARN button on the rear of the power unit for 10 seconds, the lights will blink six (6) times then turn off. ALL codes will be erased. See Figure 3.

LIGHT CONTROL

If you program a second button on the same transmitter to the same door opener by repeating steps A through C, it can be used to turn the power unit lights ON and OFF as long as the door is not moving.


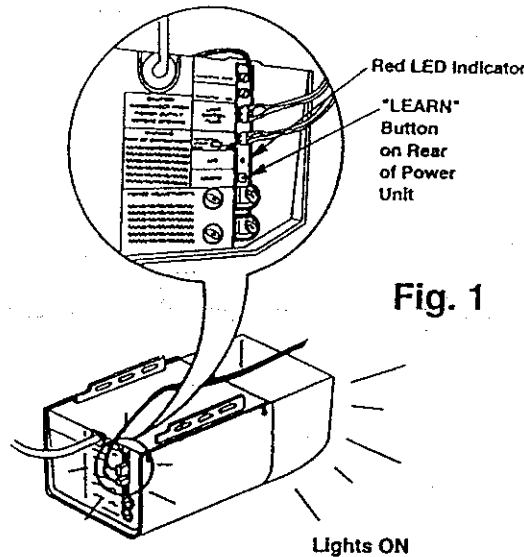


Fig. 1

Fig. 2

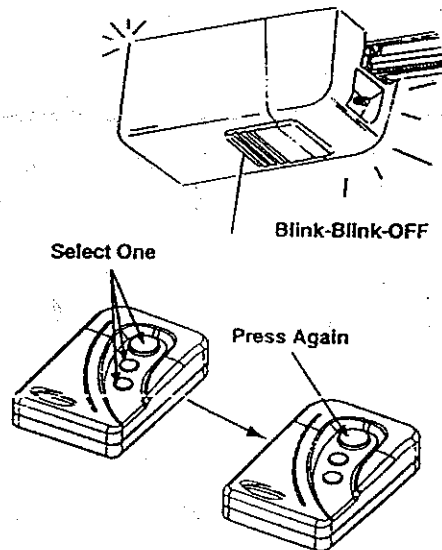

3-Button Handheld Remote Control

HOW TO CHANGE THE REMOTE'S BATTERIES

IF THE RED LIGHT ON THE REMOTE GLOWS DIMLY, OR FAILS TO LIGHT WHEN A BUTTON IS PUSHED, REPLACE THE REMOTE'S BATTERIES

② CAREFULLY REMOVE THE CIRCUIT BOARD

① REMOVE VISOR CLIP AND SCREW

③ INSTALL TWO TYPE 2016 BATTERIES PLUS (+) SIDE DOWN

④ REASSEMBLE THE UNIT WHEN FINISHED

FCC NOTICE: CHANGES OR MODIFICATIONS NOT EXPRESSLY DESCRIBED IN THESE INSTRUCTIONS OR APPROVED BY THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT. THIS DEVICE COMPLIES WITH FCC PART 15 AND INDUSTRY CANADA RULES AND REGULATIONS. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1.) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2.) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

Fig. 3

