


Light Control Actuator

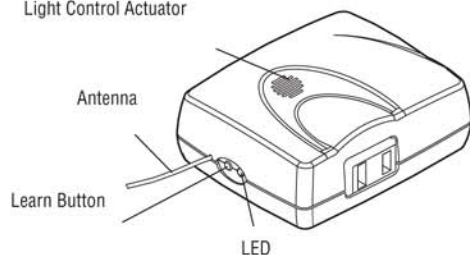

The Security+® Remote Light Control is designed to operate lights according to the rating chart shown. Please read the instructions and power limitations carefully to ensure proper use and maximum safety. NOT recommended for use with toasters, coffee pots, florescent or halogen lighting systems. **Use 120 Vac polarized outlet only.**

#### ACCESSORY REMOTE CONTROLS

37X series . . . . . Models 395LM and 395LMC  
 97X series . . . . . Models 995LM and 995LMC

## SECURITY+® REMOTE LIGHT CONTROL

Models 395LM and 395LMC (315 MHz) (Ⓢ)  
 995LM and 995LMC (390 MHz)

### ⚠ WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution or fire, the light control is **ONLY** for indoor use.

NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## INSTALLATION

- 1** Plug in the remote light control.
- 2** Locate the learn button.
- 3** Press and release the learn button on the remote light control with a pen or pencil tip. The learn LED will glow steadily for 30 seconds. Within 30 seconds...
- 4** Press and hold the button on the remote control until the LED on the remote light control flashes. Release the remote control button. Code is now complete.

If two or more light controls are installed, they must be located at least 10 feet apart to prevent electronic interference.

- 5** Unplug light while in the **ON** position.
- 6** Plug the light into the polarized outlet located on the remote light control.
- 7** **TEST AND OPERATION:**  
 Press and release the remote light control actuator. The light should turn **ON**.  
 Press and release the programmed remote control button. The light should turn **OFF**.
- 8** If the remote control does NOT activate the light:  
  - Be sure you are pressing the correct button programmed for the light.
  - Check or replace the battery in the remote control.

## TO ERASE ALL CODES FROM MEMORY

- 1** Press and hold the learn button on the remote light control until the LED goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote control you wish to use.

## RATING

Resistive load . . . . . 10 Amps  
 Motor load . . . . . 1/3 HP  
 Incandescent lamp . . . . . 600 Watts

## ONE YEAR LIMITED WARRANTY

The Chamberlain Group, Inc. warrants to the first retail purchaser of this product that is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.

DEK CANADA INC.  
 1928 ST-REGIS BLVD., DORVAL, QC, H9P 1H6  
 TEL: 514-685-5800  
 TOLL-FREE: 1-800-361-3198  
 FAX: 514-685-5804  
[www.dekcanada.com](http://www.dekcanada.com)