

Manaras RADIO022

CODING INSTRUCTION

RADIO22

Remove the back cover from the transmitter and receivers for access to the code switches. Inside in a 10-bits dip switch exposed on the circuit board. Use a pencil or ball-point pen to set the 10-bits dip switch of your choice. But, note that bits numbered 8, 9, 10 are not operational on the transmitter.

TRANSMITTER:

Determine the bits numbered 1 – 7 to ON/OFF position. For example, set bits numbered 1, 3, 5 to ON and numbered 2, 4, 6, 7 to OFF (for example, refer to the table below)

1	2	3	4	5	6	7	8	9	10	ON
■		■		■			■	■	■	↑
	■		■		■	■				

ASSOCIATED RECEIVERS

There are 3 coded receivers controllable by this channel transmitter.
Set the bits as below

1st Receiver: set the bit numbered 8,10 to ON, numbered 9 to OFF and the others bits to the same ON/OFF position as the corresponding bits in the transmitter (for example, refer to the table below).

1	2	3	4	5	6	7	8	9	10	ON
■		■		■			■		■	↑
	■		■		■	■		■		

2nd Receiver: Set the bit numbered 8 to ON and 9, 10 to OFF and others bits to the same ON/OFF position as the corresponding bits in the transmitter (for example, refer to the table below)

1	2	3	4	5	6	7	8	9	10	ON
■		■		■			■			↑
	■		■		■	■		■	■	

3rd Receiver: Set the bits numbered 8, 9 to ON, numbered 10 to OFF and the others bits to the same ON/OFF position as the corresponding bits in the transmitter (for example, refer to the table below).

1	2	3	4	5	6	7	8	9	10	ON
■		■		■			■	■		↑
	■		■		■	■			■	

IMPORTANT

Be sure all are set to the definite code, since a different setting of just one dip switch will prevent operation

HOW TO ORDER REPAIR PARTS

DEK CANADA INC

1928 ST-REGIS BLVD.

DORVAL, QC

H9P 1H6

TEL: 514-685-5800

TOLL-FREE: 1-800-361-3198

FAX: 514-685-5804

www.dekcanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

PART NUMBER	DESCRIPTION	MODEL NUMBER
--------------------	--------------------	---------------------