

GARAGE DOOR RADIO CONTROL

CODING INSTRUCTION

RADIO27

Remove the back cover from both the transmitter and the receiver for access to the code switches. Inside is a 10-bits dip switch exposed on the circuit board. Use a peneil or ball-point pen to set the 10-bits dip switch to the code of your choice.

For example, bits numbered 1,3,5,7,9 are set to ON, bits numbered 2, 4, 6, 8, 10 are OFF in the transmitter as below:

	1	2	3	4	5	6	7	8	9	10
ON	■		■		■		■		■	
↑		■		■		■		■		■

Then, to match the code of the transmitter, set the same bits numbered at ON/OFF position as the corresponding bits in the receiver as above example.

Be sure both are set to the same code, since a different setting of just one dip switch will prevent operation.

HOW TO ORDER REPAIR PARTS

DEK CANADA INC

1928 ST-REGIS BLVD.

DORVAL, QC

H9P 1H6

TEL: 514-685-5800

TOLL-FREE: 1-800-361-3198

FAX: 514-685-5804

www.dekcanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

PART NUMBER	DESCRIPTION	MODEL NUMBER
--------------------	--------------------	---------------------