## 32-CHANNEL/3-BUTTON TRANSMITTER

### **CODING INSTRUCTIONS**

#### RADIO50

#### 1. Transmitter

Inside this 32-channel transmitter is a 8-key switch. The keys numbered 1-5 are hard-wired on the circuit board and are not operational. Use a pencil or ball-point pen to set the keys numbered 6, 7, and 8 to ON or OFF positions. In the example below, keys numbered 6 and 8 are set to ON, the key numbered 7 is OFF.

0 N ↑	1	_	3.	•	•	_	7	8


#### 2. Associated Receivers

There are totally 32 differently coded receivers can be controlled. Inside each receiver is also a 8-key switch. Set the keys as follows:

- (a) keys 6, 7, and 8: Set to the same ON or OFF positions as the corresponding keys in the transmitter.
- (b) keys 1-5: First decide the number of the receiver and set the keys as the list below:

NO.	Α	В	С	D
1	2	1, 2		1
2	2, 3	1, 2, 3	3	1, 3
3	2, 4	1, 2, 4	4	1, 4
4	2, 3, 4	1, 2, 3, 4	3, 4	1, 3, 4
5	2, 5	1, 2, 5	5	1, 5
6	2, 4, 5	1, 2, 4, 5,	4, 5	1, 4, 5
7	2, 3, 5	1, 2, 3, 5	3, 5	1, 3, 5
8	2, 3, 4, 5	1, 2, 3, 4, 5	3, 4, 5	1, 3, 4, 5

For example, for the receiver numbered B5 the keys 1, 2, 5, and 7 are set to OFF.

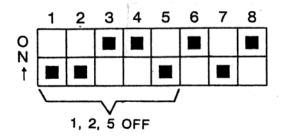

## **HOW TO ORDER REPAIR PARTS**

# **DEK CANADA INC**

1928 ST-REGIS BLVD. DORVAL, QC H9P 1H6

TEL: 514-685-5800 TOLL-FREE: 1-800-361-3198 FAX: 514-685-5804

www.dekcanada.com

WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:

PART NUMBER DESCRIPTION MODEL NUMBER