 


LiftMaster®

Models 33LM, 33LMC,
61LM, & 61LMC



 
Models 62LM & 62LMC



Models 33LM, 33LMC
63LM, & 63LMC



Models 64LM & 64LMC



WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- **ALWAYS** keep remote controls out of reach of children. **NEVER** permit children to operate, or play with remote control transmitters.
- Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- **ALWAYS** keep gate or garage door in sight until completely closed. **NEVER** permit anyone to cross path of moving gate or door.

INTRODUCTION

This product is for use with gate operators, commercial door operators and any LiftMaster® product that uses a 390 MHz fixed code. The single-button remote control will activate one device, the 2-button remote control will activate up to 2 devices, and the 3-button remote control will activate up to 3 devices.

BEFORE YOU BEGIN

Locate the dip switches on your remote control

Single-Button and 3-Button Remote Controls:

Slide the battery cover open to access the dip switches in the remote control.

Single and 3-Button Remote Controls




2-Button Remote Control:

The 2-button remote control has two sets of dip switches.

Slide the battery cover open to access the dip switches for the smooth button. Remove the screw on the back of the remote control and remove the cover by pressing the tab. This will access the dip switches for the ribbed button.

2-Button Remote Controls

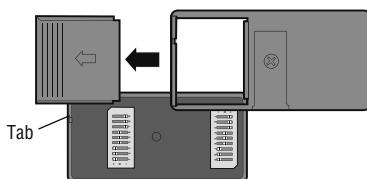


3-Button Mini Remote Control:

The large top button is recommended for use with a garage door opener and/or light control product. The other push buttons can be used to operate another garage door opener and/or light control product.

Access the dip switches by turning the remote over and removing the back of the case. Be careful to avoid moving circuit board components.

 Mini Remote Controls



PROGRAMMING

Use a pen or screwdriver to slide the dip switches.


Programming the remote control to an existing remote control

Locate the dip switches in the new and old remote controls. Place remote controls side by side and set the dip switches in the remote controls to matching positions (+,0,-).

Programming a 3-button remote control

When programming a single or 2-button remote control to a 3-button remote control it is very important to set dip switch #1 to the correct position. The dip switch in the single or 2-button remote control **MUST** correspond to the buttons on the 3-button remote control as shown.

Example: If you are programming a single-button remote control to the middle button on the 3-button remote control, dip switch #1 in the single-button remote control **MUST** be set to "0" in order for both buttons to work.

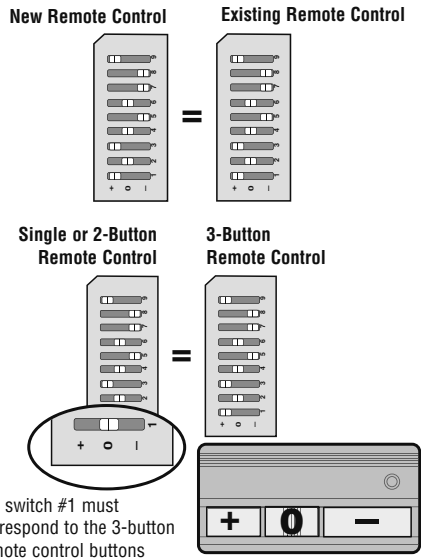

Programming the remote control without an existing remote control


Set the dip switches in the remote controls to any position you want (+,0,-).

Programming with Smart/Learn button

- 1 Press and release the Smart/Learn button on your product. The LED will light.
- 2 Within 30 seconds press and hold the button on the remote control that you wish to activate your product.

Programming is complete.


Repeat the steps above for each button and/or remote control you would like to program.

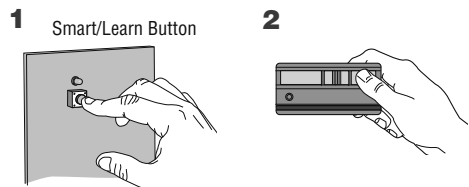

Programming with dip switches

- 1 Check the dip switch settings on the back of your product.
- 2 Use a pen or screwdriver to slide the dip switches in the remote control to match the dip switches on the back of the product.

When the dip switches have been set press the remote control button to activate your product.

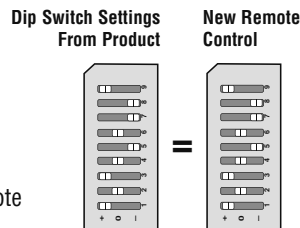

PROGRAMMING MODEL 33LM ONLY





WARNING

Install the control station and receiver where the door is visible, but away from the door and its hardware. When a receiver is used to activate a commercial door opener, a reversing edge **MUST** be installed on the bottom of the door. Failure to install a reversing edge under these circumstances may result in **SERIOUS INJURY** or **DEATH** to persons trapped beneath the door.

Model 33LM 3-button remote controls can also be used with a 423LM 3-channel receiver and a 3-button door control to activate a commercial door operator in OPEN, CLOSE, and STOP mode.


- 1** Use a screwdriver to pry open the receiver cover.
- 2** Verify that the slide switch on receiver is set to the N.C. position (otherwise the commercial door operator will not operate).
- 3** Press and release the Smart/Learn button labeled "A" on the receiver. The adjacent LED will flash.
- 4** Within 30 seconds press and release the red button on the remote control. The red button is now programmed for CLOSE mode.

NOTE: If the remote control button is not pressed within 30 seconds, the LED next to the selected Smart/Learn button will turn OFF. In that case, press the Smart/Learn button again to repeat programming.

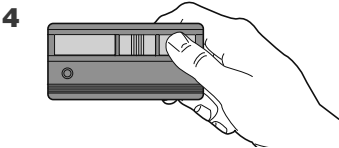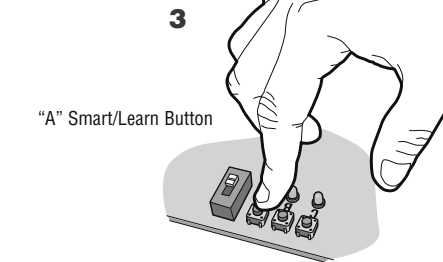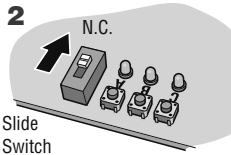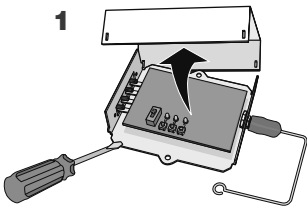

Repeat the steps 3-4 above with the yellow button on the remote control and the receiver Smart/Learn button "B" to program the CLOSE mode; and again with the green button on the remote control and the receiver Smart/Learn button "C" to program the OPEN mode.


- 5** Replace the receiver cover.

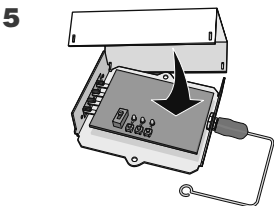

THE REMOTE CONTROL BATTERY

 WARNING

- To prevent possible **SERIOUS INJURY** or **DEATH**:
- NEVER allow small children near batteries.
 - If battery is swallowed, immediately notify doctor.

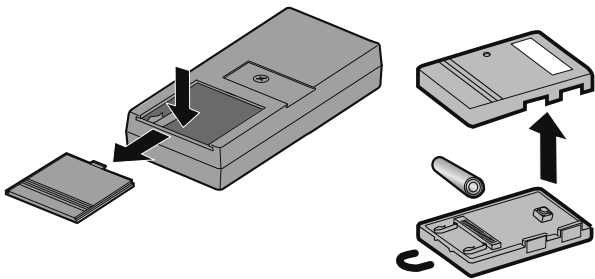

NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or remote control are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

REPLACEMENT PARTS

Visor clip	29C128
12V battery	10A14

HOW TO ORDER REPAIR PARTS

DEK CANADA INC

1928 ST-REGIS BLVD.

DORVAL, QC

H9P 1H6

TEL: 514-685-5800

TOLL-FREE: 1-800-361-3198

FAX: 514-685-5804

www.dekcanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

PART NUMBER	DESCRIPTION	MODEL NUMBER
--------------------	--------------------	---------------------