

GARAGE DOOR RADIO CONTROL

CODING INSTRUCTION

For MICANAN model MV00024 / CT-4

Remove the back cover from the transmitter and the receiver for access to the code switches. Inside is a 8-bits dip switch exposed on the circuit board. Use a pencil or ball-point pen to set the 8-bits dip switch of your choice. But, note that bits numbered 1 and 2 are not operational on the transmitter.

TRANSMITTER:

Determine the bits numbered 3 - 8 to ON/OFF position, For example, set bits numbered 3, 5, 6, 8, to ON, numbered 4, 7 to OFF.

	1	2	3	4	5	6	7	8
ON							n.	
1								

ASSOCIATED RECEIVERS:

There are 4 coded receivers controllable by this 4-channel transmitter. Set the bits as bleow:

a) First, follow same bits numbered 3 - 8 to ON/OFF as the corresponding bits in the transmitter as above example.

_	1	2	3	4	5	6	7	8
ON								
1								

b) Then, set the bits numbered 1 and 2 to fixed position as follows, for matching the transmitter switch button accordingly.

Transmitter button switch	Receiver	Dip switch 1 2 3 4 5 6 7 8								
A	1st	ON	Î	Ĺ	Ľ	Ĺ	Ľ	Ľ	Ė	Ľ
В	2nd	ON	_							
C	3rd	ON								
D	4th	ON								
			-	_						

Be sure all are set to the definite code, since a different setting of just one dip switch will prevent operation.

DEK CANADA INC

1928 ST-REGIS BLVD. DORVAL, QC H9P 1H6

TEL: 514-685-5800 TOLL-FREE: 1-800-361-3198 FAX: 514-685-5804

www.dekcanada.com

WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:

PART NUMBER DESCRIPTION MODEL NUMBER